

How to recover Popcorn Hour S-210 from firmware update failure with fail-safe kernel?

1. Remove the Internal USB drive from S-210.
2. Download the recovery firmware from http://www.popcornhour.com/download/s210_recovery_081022.zip
3. Unzip both *.bin onto the root of an empty USB thumbdrive and plug into external USB port of S-210.
4. Power up the unit.
5. Wait for around 20 minutes for the firmware to recover.
6. After successful recovery, power cycle will bring it up again to 31-15-081022-14-POP-406 firmware.

If the recovery process doesn't work, please try to set the jumper as shown before proceed with the above steps.

Remember to remove the jumper and external USB flash drive in next power up cycle after successfully recovered the firmware.

